

AR-308 RIFLE BUFFER SPRING - LUTH-AR AR-308 RIFLE BUFFER SPRING

[Rifle Parts](#) > [Receiver Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Luth-AR factory replacement 308 Rifle Buffer Spring.



Attributes

- Name: [LUTH-AR AR-308 RIFLE BUFFER SPRING](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 100028025
- Mfr. No.: 308-BS-10B
- Weapon type: AR .308
- Delivery weight: 0.091kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 318mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [AR308 Rifle Buffer Spring Safety Instructions](#)
- [About Us](#)

AR308 Rifle Buffer Spring Safety Instructions

Introduction

Thank you for purchasing the LuthAR AR308 Rifle Buffer Spring. This guide provides important safety information to ensure the safe installation and use of your product. Please read this document carefully before use.

General Safety Guidelines

- Always handle firearms and related components with care and in accordance with local laws and regulations.
- Ensure that the AR308 Rifle Buffer Spring is compatible with your specific firearm model.
- Inspect the buffer spring for any signs of damage or wear before installation.
- Store the buffer spring in a dry and secure location, away from children and unauthorized users.
- Be aware of the potential hazards associated with the use of firearms and take necessary precautions to mitigate these risks.

Specific Safety Precautions for Use

- Do not use the buffer spring if it shows signs of damage, such as bends, cracks, or unusual wear.
- Ensure that the firearm is unloaded and pointed in a safe direction during installation.
- Wear appropriate safety gear, such as eye protection, when working with firearms.
- Keep hands and body clear of the action of the firearm while installing the buffer spring.
- Follow the manufacturer's instructions for your firearm regarding buffer spring installation and maintenance.

Instructions for Installation and Usage

1. Preparation

- Ensure the firearm is unloaded and in a safe condition.
- Gather necessary tools for installation, including a wrench and any other required tools as per your firearm's manual.

2. Installation Steps

- Remove the existing buffer spring from the buffer tube according to your firearm's manual.
- Inspect the buffer tube for any debris or damage.
- Install the LuthAR AR308 Rifle Buffer Spring into the buffer tube, ensuring it is seated properly.
- Reassemble any components that were removed during the installation process.
- Perform a function check to verify that the buffer spring operates correctly with the firearm.

3. Usage

- Regularly inspect the buffer spring for wear and replace it if necessary.
- Follow all safety protocols when using your firearm, including proper handling and storage practices.

Disposal Instructions

- Dispose of the buffer spring in accordance with local regulations for metal recycling or hazardous waste.
- Do not discard the buffer spring in regular household waste.

Contact Information for Further Support

If you have questions or need further assistance regarding the LuthAR AR308 Rifle Buffer Spring, please refer to the manufacturer's customer support resources. Always ensure you are following the latest safety guidelines and regulations.

Conclusion

By following these safety instructions, you can help ensure the safe and effective use of your LuthAR AR308 Rifle Buffer Spring. Stay informed about product recalls and safety alerts through the EU Safety Gate platform. Thank you for your commitment to safety and responsible firearm use.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk