AR-15 SEMI-AUTO TRIGGER

Rifle Parts > Triggers Parts > Triggers

Luth-AR factory replacement trigger. Fits standard AR-15 rifles.



Attributes

• Name: AR-15 SEMI-AUTO TRIGGER

Manufacturer: <u>LUTH-AR</u>Product no.: 100028039

Mfr. No.: LR20Make: AR-15Style: Semi-Auto

Delivery weight: 0.045kg
Shipping height: 25mm
Shipping width: 25mm
Shipping length: 25mm
UPC: 859819007485

Item details

Made in USA

US export classification: 0A501.c

Table of Contents

- Startpage
- AR15 SemiAuto Trigger Safety Instruction Guide
- About Us

AR15 SemiAuto Trigger Safety Instruction Guide

Introduction

Thank you for choosing the AR15 SemiAuto Trigger by LuthAR. This guide provides important safety instructions and guidelines to ensure the safe use and installation of your new trigger. Please read this manual carefully before use.

General Safety Guidelines

- Always treat your firearm as if it is loaded.
- Keep your finger off the trigger until you are ready to shoot.
- Store the firearm and trigger in a secure location, out of reach of children and unauthorized users.
- Always wear appropriate eye and ear protection when handling firearms.
- Be aware of your surroundings and ensure a safe shooting environment.
- Regularly inspect your firearm and trigger for any signs of wear or damage.
- Report any unsafe products or accidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that the AR15 is unloaded before installing the trigger.
- Do not attempt to modify the trigger or firearm in any way that could compromise safety.
- Only use the trigger with standard AR15 rifles as specified by the manufacturer.
- Avoid using the trigger in wet or damp conditions to prevent malfunction.
- Regularly clean and maintain your trigger to ensure proper function.
- If you experience any malfunctions, cease use immediately and consult a qualified gunsmith.

Instructions for Installation and Usage

Installation Instructions

- 1. **Safety First**: Ensure the firearm is completely unloaded. Remove the magazine and visually inspect the chamber.
- 2. Gather Tools: You will need a punch tool, screwdriver, and appropriate safety gear.
- 3. Remove the Old Trigger:
 - Use the punch tool to remove the pins holding the old trigger in place.
 - Carefully take out the old trigger and disconnect any associated components.
- 4. Install the New Trigger:
 - Align the new AR15 SemiAuto Trigger with the trigger assembly.
 - Insert the pins to secure the trigger in place.
 - Ensure all components are properly connected and functioning.
- 5. Test the Trigger:
 - Before reassembling the firearm, perform a function check to ensure the trigger operates correctly.
 - If everything is functioning properly, reassemble the firearm.

Usage Instructions

- Always follow proper firearm handling and safety protocols.
- Ensure that the trigger is functioning correctly before each use.
- Familiarize yourself with the trigger's operation and characteristics.
- If unsure about the installation or usage, consult a qualified professional.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the trigger in regular household waste.
- If the trigger is damaged or no longer functional, contact a qualified disposal service.

Contact Information for Further Support

For any questions or concerns regarding the AR15 SemiAuto Trigger, please consult the manufacturer's website or customer service for assistance. Always ensure that you have the latest information regarding safety recalls and product updates.

Thank you for prioritizing safety while using your AR15 SemiAuto Trigger. Your adherence to these guidelines helps ensure a safe and enjoyable shooting experience.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at