

# MINI CAMERA TRIPOD

[Optics & Mounting](#) > [Action Cameras](#) > [Accessories](#)

Rather than looking for a stable piece of ground for your target camera, it makes more sense to outfit your downrange system with a stable tripod that keeps it securely pointed at your target in all conditions. Enter the LONGSHOT Mini Camera Tripod. Not only is this Minim Camera Tripod designed to keep your camera pointed at the right spot for all-day shooting, it's also small and light enough to be easily carried into remote shooting spots.



## Attributes

- Name: [MINI CAMERA TRIPOD](#)
- Manufacturer: [LONGSHOT TARGET CAMERAS](#)
- Product no.: 100038724
- Mfr. No.: TV-AT100
- Delivery weight: 0.313kg
- Shipping height: 76mm
- Shipping width: 76mm
- Shipping length: 229mm
- UPC: 649070997652

# Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for the LONGSHOT Mini Camera Tripod](#)
- [About Us](#)

# Safety Instruction Guide for the LONGSHOT Mini Camera Tripod

## Introduction

Thank you for choosing the LONGSHOT Mini Camera Tripod. This guide provides important safety instructions and guidelines to ensure safe and effective use of your tripod. Please read this document carefully before using the product.

## General Safety Guidelines

- Ensure the tripod is stable before placing your camera on it.
- Always doublecheck that all locks and adjustments are secure before use.
- Use the tripod only for its intended purpose, which is to support cameras.
- Keep the tripod away from children and pets to prevent accidents.
- Regularly inspect the tripod for any signs of wear or damage before each use.
- If you notice any defects or issues, discontinue use immediately and seek assistance.

## Specific Safety Precautions for Use

- Do not exceed the maximum weight limit of the tripod. Refer to the product specifications for weight limits.
- Avoid using the tripod in extreme weather conditions (e.g., high winds, heavy rain) to prevent tipping or damage.
- Ensure that the ground is level and stable where the tripod is set up.
- Do not leave the tripod unattended while in use to avoid accidents.
- Avoid placing the tripod near the edge of a surface or in a hightraffic area.

## Instructions for Installation and Usage

### 1. Setup:

- Unfold the tripod legs and spread them evenly to create a stable base.
- Adjust the leg length to ensure the tripod is level on uneven surfaces.
- Lock the legs in place securely.

### 2. Attaching the Camera:

- Locate the camera mount on the tripod.
- Align the camera's mounting plate with the tripod mount.
- Securely tighten the camera to the tripod using the provided locking mechanism.

### 3. Adjusting the Tripod:

- Use the adjustable center column to change the height of the camera as needed.
- Tilt and pan the camera as desired using the tripod's adjustment features.

### 4. Dismantling:

- Carefully remove the camera from the tripod.
- Collapse the tripod legs and ensure they are locked in place for safe transport.

## Disposal Instructions

- Dispose of the tripod in accordance with local regulations for electronic waste.
- Do not dispose of the tripod in regular household waste.
- Check with local authorities or recycling centers for proper disposal methods.

## Contact Information for Further Support

For any safety inquiries or support regarding the LONGSHOT Mini Camera Tripod, please contact your local distributor or retailer. They can provide you with assistance and information on product recalls or safety alerts.

Thank you for your attention to these safety guidelines. Enjoy your photography experience with the LONGSHOT Mini Camera Tripod!

# About Us

## Brownells Austria

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.at](http://www.brownells.at)