

AR-15 SPRING KIT - LUTH-AR AR-15 SPRING KIT

[Rifle Parts](#) > [Bolt Parts](#) > [Bolt Carrier Parts](#) > [Bolt Carrier Hardware](#)

Spring Kit for AR-15 Keep your AR running smoothly with our spring kit. It includes everything you need to fix common issues and get your rifle back to peak performance. With durable materials and easy-to-use instructions, this kit is a must-have for any AR owner. Don't let a broken or lost spring slow you down - get your repair kit today. Contains: UR-05 Ejection Port Spring LR-32 Hammer Spring LR-22 Trigger Spring UR-07 Forward Assist Spring LR-16 Magazine Catch Spring LR-26 Selector Spring LR-31 Disconnector Spring LR-09 Bolt Catch Spring BT-08 Extractor Spring LR-14 Detent Spring (x2) LR-02 Buffer Retainer Spring UR-17 Charging Handle Spring



Attributes

- Name: [LUTH-AR AR-15 SPRING KIT](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 430107616
- Mfr. No.: AR-SK
- Weapon type: AR-15
- Delivery weight: 0.454kg
- Shipping height: 76mm
- Shipping width: 178mm
- Shipping length: 178mm
- UPC: 812058031611

Item details

Made in USA

Table of Contents

- Startpage
- AR15 Spring Kit Safety Instructions
- About Us

AR15 Spring Kit Safety Instructions

Introduction

Thank you for choosing the AR15 Spring Kit by LUTHAR. This product is designed to help you maintain your AR15 rifle and ensure its optimal performance. Please read this safety instruction guide carefully to ensure safe and effective use of the spring kit.

General Safety Guidelines

- Always handle firearms with care and follow all safety protocols.
- Ensure that the firearm is unloaded before performing any maintenance or repairs.
- Keep all components of the spring kit out of reach of children and unauthorized users.
- Inspect all springs and components for damage before installation.
- Use the spring kit only for its intended purpose and in accordance with the manufacturer's instructions.
- Report any unsafe products or accidents to the appropriate authorities.
- Stay informed about product recalls and safety updates via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Identification of Hazards:**
 - Potential risks include improper installation leading to firearm malfunction.
 - Small parts may pose a choking hazard if ingested.
- **Avoiding Hazards:**
 - Always follow the installation instructions precisely.
 - Wear safety glasses when working on your firearm to protect your eyes from potential spring recoil or debris.
 - Work in a welllit area free from distractions.

Instructions for Installation and Usage

1. Preparation:

- Ensure that your AR15 is unloaded and pointed in a safe direction.
- Gather all tools required for installation, including a punch tool and appropriate lubricant.

2. Installation Steps:

- **Ejection Port Spring (UR05):**
 - Remove the existing ejection port cover.
 - Install the new ejection port spring by following the reverse order of removal.
- **Hammer Spring (LR32):**
 - Remove the hammer from the lower receiver.
 - Replace the old hammer spring with the new one, ensuring it is seated properly.
- **Trigger Spring (LR22):**
 - Remove the trigger assembly.
 - Replace the trigger spring and reassemble the trigger.
- **Forward Assist Spring (UR07):**
 - Remove the forward assist mechanism.
 - Install the new forward assist spring.
- **Magazine Catch Spring (LR16):**
 - Remove the magazine catch.
 - Replace the magazine catch spring and reassemble.
- **Selector Spring (LR26):**

- Remove the selector switch.
- Replace the selector spring and reassemble.
- **Disconnector Spring (LR31):**
 - Remove the disconnector from the trigger assembly.
 - Replace the disconnector spring and reassemble.
- **Bolt Catch Spring (LR09):**
 - Remove the bolt catch.
 - Replace the bolt catch spring and reassemble.
- **Extractor Spring (BT08):**
 - Remove the extractor from the bolt.
 - Replace the extractor spring and reassemble.
- **Detent Spring (LR14):**
 - Replace the detent springs as needed (2 included).
- **Buffer Retainer Spring (LR02):**
 - Remove the buffer retainer.
 - Replace the buffer retainer spring and reassemble.
- **Charging Handle Spring (UR17):**
 - Remove the charging handle.
 - Replace the charging handle spring and reassemble.

3. PostInstallation:

- After installing all components, perform a function check to ensure everything operates correctly.
- Clean any excess lubricant from the firearm before use.

Disposal Instructions

- Dispose of any old springs and components responsibly.
- Follow local regulations for disposal of metal parts and hazardous materials.
- Do not throw away springs in regular trash; consider recycling options if available.

Contact Information for Further Support

For any questions or concerns regarding the AR15 Spring Kit, please refer to the manufacturer's contact information provided with your product packaging. Keep this manual for future reference.

By following these safety instructions and guidelines, you can ensure the safe and effective use of your AR15 Spring Kit. Thank you for your attention to safety and for choosing LUTHAR products.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk