

EXTENDED SLIDE CATCH LEVER FOR SIG SAUER® P365 - EXTENDED SLIDE CATCH LEVER FOR SIG SAUER P365 BLACK

Introducing the first-ever Sig Sauer 365 Extended Slide Catch to be CNC Machined! Made from stainless steel and finished in PVD their drop-in replacement Sig Sauer slide catch lever is the perfect upgrade for your pistol. Having issues returning your slide forward when loaded OR even when no magazine is present? Tyrant has made slight geometry changes that now allow the slide catch to also function as a slide release (no slide release function on empty magazines). This means no more needing to use both thumbs and no more needing to manipulate the slide by hand in order to return to battery! Their Sig Sauer 365 extended slide catch/release adds surface area and a raised texture that greatly improves usability for all! It is the perfect upgrade for conceal carry AND competition. Never again will your thumb slip while manipulating your Sig Sauer slide release! What is it? This drop-in replacement Sig Sauer P365 extended slide catch/release lever has a surface area extended over the OEM size. Why use it? One of the main flaws of the Sig Sauer Factory release lever is that it is extremely difficult to manipulate with one thumb/hand. This results in the operator occasionally slipping when attempting to manipulate the lever, or simply failing to put the firearm into battery. Their Sig P365 slide catch/release lever offers an extended AND raised surface area to ensure easy manipulation of the Sig Sauer slide. It is easy to install, functions great, and looks fantastic! Fits all post 2019 P365 variants Platform: Sig-Sauer Designed For Models; P365 Fitment Notes Uses existing OEM spring All post 2019 Sig Sauer P365 platform variants (May not be compatible 2019 and earlier FCU's) Works on new 365 Macro Fits on California compliant versions Component: Extended Slide Release

NO IMAGE
AVAILABLE

Attributes

- Name: EXTENDED SLIDE CATCH LEVER FOR SIG SAUER P365 BLACK
- Manufacturer: TYRANT CNC
- Product no.: 430112949
- Mfr. No.: TD-P365SCL-BLACK
- Caliber: 9 mm Luger
- Finish: Black
- Make: Sig Sauer
- Model: P365
- Delivery weight: 0.009kg
- Shipping height: 102mm
- Shipping width: 6mm
- Shipping length: 114mm
- UPC: 612789319046

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for EXTENDED SLIDE CATCH LEVER FOR SIG SAUER P365](#)

Safety Instruction Guide for EXTENDED SLIDE CATCH LEVER FOR SIG SAUER P365

Introduction

Thank you for choosing the EXTENDED SLIDE CATCH LEVER FOR SIG SAUER P365. This product is designed to enhance the functionality and usability of your firearm. Please read this safety instruction guide carefully to ensure safe use and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that the product is used only with the intended firearm model, specifically the Sig Sauer P365.
- Always treat your firearm as if it is loaded, even when you believe it is not.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the slide catch lever for wear or damage.
- If you experience any issues with the product, cease use immediately and consult a qualified gunsmith.

Specific Safety Precautions for Use

- Do not attempt to modify or alter the slide catch lever in any way.
- Ensure the firearm is unloaded before installation or maintenance.
- Always follow the manufacturer's instructions when operating your firearm.
- Be aware that the slide catch lever is designed to function as a slide release only when there is a loaded magazine present.
- Avoid using excessive force when manipulating the slide catch lever to prevent damage.

Instructions for Installation and Usage

Installation

1. Ensure the firearm is completely unloaded. Remove the magazine and visually inspect the chamber.
2. Using a suitable tool, remove the existing slide catch lever from your Sig Sauer P365.
3. Align the new EXTENDED SLIDE CATCH LEVER with the existing mounting points.
4. Secure the lever in place, ensuring it is properly seated.
5. Reinstall any components removed during the process, ensuring everything is reassembled correctly.

Usage

- To engage the slide catch, press down on the lever with your thumb.
- To release the slide, ensure a loaded magazine is inserted, then press the lever to allow the slide to move forward.
- Practice using the lever in a safe environment to become familiar with its operation and ensure proper functionality.

Disposal Instructions

- Dispose of any packaging materials in accordance with local regulations.
- If the slide catch lever is damaged or no longer functional, dispose of it responsibly. Do not discard it in regular waste.
- Check local guidelines for the proper disposal of firearm accessories.

Contact Information for Further Support

For any questions or concerns regarding the EXTENDED SLIDE CATCH LEVER FOR SIG SAUER P365, please refer to the manufacturer's contact information provided with the product packaging.

Conclusion

By following these safety instructions, you can ensure the safe and effective use of your EXTENDED SLIDE CATCH LEVER FOR SIG SAUER P365. Always prioritize safety and compliance with local laws and regulations when handling firearms. Thank you for your attention to these important safety guidelines.