


RECOIL SPRING 5" FULL SIZE - WILSON COMBAT RECOIL SPRING-5" FULL-SIZE-18 1/2 LB

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Spring Guide Rods](#)

Recommended Use: Full-Size 5" .45 ACP shooting 185 gr. / 200 gr. standard pressure target or JHP self-defense ammunition with a power factor of 145,000 to 170,000 (Velocity x Bullet Weight = Power Factor) / Average Service Life: 3,000 Rounds / Wilson Combat Heavy-Duty Recoil Springs are made combat tough to repeatedly take a pounding yet show remarkably consistent performance every time a round is fired. / Keeping a fresh recoil spring in your pistol will dramatically reduce the pounding your slide and frame receive.

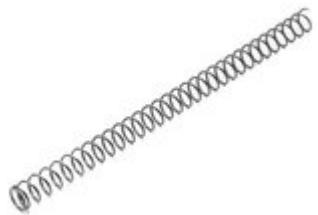

Attributes

- Name: [WILSON COMBAT RECOIL SPRING-5" FULL-SIZE-18 1/2 LB](#)
- Manufacturer: [WILSON COMBAT](#)
- Product no.: 965000246
- Mfr. No.: 10G18
- Model: Government
- Weapon type: 1911
- Delivery weight: 0.045kg
- Shipping height: 8mm
- Shipping width: 81mm
- Shipping length: 231mm
- UPC: 874218000219

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for RECOIL SPRING 5" FULL SIZE WILSON COMBAT
- About Us

Safety Instruction Guide for RECOIL SPRING 5" FULL SIZE WILSON COMBAT

Introduction

Thank you for choosing the RECOIL SPRING 5" FULL SIZE WILSON COMBAT. This guide provides essential safety instructions to ensure the safe use and maintenance of your recoil spring. Please read this document carefully before installation and use.

General Safety Guidelines

- Ensure that all safety measures are understood and followed.
- Always handle firearms with care and assume they are loaded until verified otherwise.
- Keep this product out of reach of children and unauthorized users.
- Regularly inspect the recoil spring for wear and tear.
- Report any unsafe product experiences or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Use only with FullSize 5" .45 ACP firearms.
- Only use standard pressure target or JHP selfdefense ammunition with a power factor of 145,000 to 170,000.
- Avoid using ammunition that exceeds the recommended specifications, as this may cause damage or malfunction.
- Regularly replace the recoil spring after approximately 3,000 rounds to maintain optimal performance and safety.
- Ensure that the firearm is unloaded before installing or replacing the recoil spring.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation.

2. Installation Steps:

- Remove the slide from the frame of the firearm according to the manufacturer's instructions.
- Locate the existing recoil spring and guide rod.
- Carefully remove the old recoil spring from the guide rod.
- Align the new recoil spring on the guide rod, ensuring it is seated properly.
- Reattach the slide to the frame, ensuring all components are aligned correctly.

3. Usage:

- After installation, perform a function check by cycling the action without ammunition.
- Test the firearm with ammunition in a safe and controlled environment.
- Monitor the performance of the recoil spring during use and replace it if any issues arise.

Disposal Instructions

- Dispose of the recoil spring in accordance with local regulations.
- Do not dispose of the recoil spring in regular household waste.

- Consider recycling options if available.

Contact Information for Further Support

For any inquiries regarding safety or product performance, please refer to the appropriate contact channels provided by your retailer or manufacturer.

Thank you for your attention to these important safety guidelines. Your safety is our priority.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk