 


TYPE D EXTRA POWER SPRINGS FOR HARDBALL & HEAVIER LOADS - WOLFF 20 LB. RECOIL SPRING

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Fine Tune For Light, Standard Or Heavy Loads

Like all Wolff springs, these for the 1911 Auto in .45, .38 Super or 9mm are the finest, most reliable, longest lasting ones available. The springs of choice for most of the nation's top builders. Except where noted, all recoil springs are supplied with an extra power firing pin spring that keeps the firing pin stop in place and prevents firing pin float ; an addition recommended by pistolsmith Bill Wilson. TYPE D - Extra Power For Hardball and Heavier Loads in Commander - Provides same benefits as Type C springs, but for the shorter Commander which comes standard with an 18 lb. spring. Includes extra power firing pin spring.



Attributes

- Name: [WOLFF 20 LB. RECOIL SPRING](#)
- Manufacturer: [WOLFF](#)
- Product no.: 969422200
- Mfr. No.: 42220
- Model: Commander
- Pounds: 20 lbs
- Weapon type: 1911
- Delivery weight: 0.014kg
- Shipping height: 20mm
- Shipping width: 89mm
- Shipping length: 213mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for TYPE D EXTRA POWER SPRINGS FOR HARDBALL & HEAVIER LOADS
WOLFF 20 LB. RECOIL SPRING](#)
- [About Us](#)

Safety Instruction Guide for TYPE D EXTRA POWER SPRINGS FOR HARDBALL & HEAVIER LOADS WOLFF 20 LB. RECOIL SPRING

Introduction

Thank you for choosing the TYPE D Extra Power Springs for Hardball and Heavier Loads. This product is designed to enhance the performance of your 1911 Auto in .45, .38 Super, or 9mm. It is essential to follow the safety guidelines outlined in this document to ensure safe and effective use of the recoil spring.

General Safety Guidelines

- Ensure that all users of this product are familiar with the operation and safety features of the firearm.
- Always store springs and other firearm components in a safe and secure location, out of reach of children and unauthorized individuals.
- Inspect the recoil spring and firing pin spring for any signs of wear or damage before each use.
- Follow all local laws and regulations regarding the use and modification of firearms.
- Use only compatible components with your firearm to avoid malfunctions.

Specific Safety Precautions for Use

- Ensure that the firearm is unloaded before installing or replacing the recoil spring.
- Wear protective eyewear when handling firearms and their components to protect against accidental discharge.
- Use caution when handling the recoil spring, as it is under tension and can cause injury if released improperly.
- Do not attempt to modify or alter the recoil spring or any firearm components beyond manufacturer specifications.
- Keep fingers and other body parts clear of the recoil spring during installation and removal.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools, including a punch tool and a hammer if needed.

2. Removing the Old Recoil Spring:

- Disassemble the firearm according to the manufacturer's instructions.
- Carefully remove the old recoil spring from the guide rod. Use caution as it may be under tension.

3. Installing the New Recoil Spring:

- Place the new TYPE D Extra Power Recoil Spring onto the guide rod.
- Ensure that the spring is seated properly and aligned with the guide rod.

4. Reassembly:

- Reassemble the firearm according to the manufacturer's instructions.
- Ensure that all components are securely in place before handling the firearm.

5. Testing:

- Conduct a function check to ensure that the firearm operates correctly with the new recoil spring.
- Test the firearm in a safe and controlled environment, following all safety protocols.

Disposal Instructions

- Dispose of old springs and any packaging materials in accordance with local regulations.
- Do not dispose of springs in fire or extreme heat, as they may release harmful substances.

Contact Information for Further Support

For any inquiries or concerns regarding the TYPE D Extra Power Springs, please refer to the manufacturer's contact details provided with your product packaging. Always ensure that you are consulting authorized sources for support and information.

By following these guidelines, you can ensure the safe and effective use of your TYPE D Extra Power Springs for Hardball and Heavier Loads. Your safety and the safety of others is our top priority. Thank you for your attention to these important instructions.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk