

Pile Driver Bullet Puller

[Reloading](#) > [Case Preparation](#) > [Bullet Pullers](#)

The new Pile Driver Bullet Puller from Frankford Arsenal is designed to mount to your bench or wall for convenient access. The easy lever design uses spring power to pull bullets from cartridges up to 30-06 length (338 Lapua length with Magnum Carrier, sold separately). Bullets and powder are captured in an included trap or an optional barbed fitting is provided for attaching a tube to collect with ease.

NO IMAGE
AVAILABLE

Attributes

- Name: [Pile Driver Bullet Puller](#)
- Manufacturer: [Frankford Arsenal](#)
- Product no.: EU1001653
- Mfr. No.: 1116083
- Colour: Black
- Delivery weight: 2.09kg
- Shipping height: 191mm
- Shipping width: 127mm
- Shipping length: 521mm
- UPC: 661120079408

Table of Contents

- [Startpage](#)
- [Frankford Arsenal Pile Driver Bullet Puller Safety Instructions](#)
- [About Us](#)

Frankford Arsenal Pile Driver Bullet Puller Safety Instructions

Introduction

Thank you for choosing the Frankford Arsenal Pile Driver Bullet Puller. This guide provides important safety instructions and operational guidelines to ensure safe and effective use of the product. Please read this manual thoroughly before use.

General Safety Guidelines

- Always use the Bullet Puller in a wellventilated area to avoid inhaling any dust or particles.
- Keep the work area clean and organized to prevent accidents.
- Ensure that the Bullet Puller is securely mounted to a stable surface before use.
- Use personal protective equipment (PPE) such as safety goggles and gloves when handling ammunition components.
- Keep the Bullet Puller out of reach of children and unauthorized users.
- Regularly inspect the Bullet Puller for any signs of wear or damage before each use.
- Do not modify or alter the Bullet Puller in any way.

Specific Safety Precautions for Use

- Ensure that all ammunition is properly indexed and that no live rounds are present in the work area.
- Avoid using the Bullet Puller with ammunition that exceeds the specified length (up to 3006 length; 338 Lapua with Magnum Carrier).
- Do not attempt to pull bullets from damaged or corroded cartridges.
- Always follow the manufacturer's instructions when attaching or detaching any fittings or tubes.
- Be cautious of the spring mechanism; keep hands and body parts clear while operating the lever.
- If you experience any unusual resistance or sounds during use, stop immediately and inspect the Bullet Puller for issues.

Instructions for Installation and Usage

Installation

1. Choose a suitable location on your workbench or wall for mounting the Bullet Puller.
2. Use the provided hardware to securely attach the Bullet Puller to the surface.
3. Ensure that the Bullet Puller is mounted at a comfortable height for operation.

Usage

1. Load the cartridge into the Bullet Puller, ensuring it is properly seated.
2. Engage the lever to activate the spring mechanism, pulling the bullet from the cartridge.
3. Collect the bullet and powder in the included trap or attach a tube to the optional barbed fitting for easier collection.
4. After use, clean the area and ensure all components are stored safely.

Disposal Instructions

- Dispose of any unwanted or damaged ammunition components in accordance with local regulations.
- Do not throw away the Bullet Puller in regular household waste. Check local disposal guidelines for proper disposal methods.

Contact Information for Further Support

For any inquiries regarding safety concerns or product support, please refer to the manufacturer's contact details provided with your product packaging.

By following these guidelines, you can ensure the safe and effective use of the Frankford Arsenal Pile Driver Bullet Puller. Always prioritize safety and refer back to this manual as needed.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk